

Instructions for locating and changing the WiFi password on Zyxel routers

For Zyxel routers the WiFi password is not the 'Login Password', it is 'Wireless key'

To change your password for your WiFi:

On a computer (much easier)..

Visit

<http://192.168.1.1>

(if that page does not load try <http://192.168.1.254> or <http://192.168.0.1>)

Then log in with the username admin

the password on the "Login password" line on the card from the back of the router.

If asked to change the admin password you can click Skip (or change the admin password if desired).

At the "let's get connected" screen also click Skip as the internet is already working.

Then click the 3 lines in the top right.

Then click Home Network

Then click Wireless.

Change the WiFi name so it is not the default "Zyxel_ZYX" name. This box sets the name people will see when they go to connect to wireless networks.

Scroll to the bottom of the wireless settings screen and un-tick the "Use a random password".

Type in a suitable new password.

Click the Apply button at the bottom.

Wait about a minute. Then reconnect all the devices in the house to the new wifi name and password!